



2600A Spreader Parts List

Part#	Key	Model	Description
77000	0	2600APlus	HEAVY DUTY RAIN COVER
19115	1	2600APlus	.875" ID. X 4" BLACK GRIP
25403	2	2600APlus	UPPER HANDLE
32103	3	2600APlus	1/4-20 NYLON INSERT LOCKNUT
36500	4	2600APlus	#10-24 X 1/2" CARRIAGE BOLT S.S.
33117	5	2600APlus	AGITATOR
12220	6	2600APlus	GEAR BOX BUSHING
60089	7	2600APlus	HOPPER ASSEMBLY
60088	8	2600APlus	GAUGE & LINKAGE ASSEMBLY
31100	9	2600APlus	1/4-20 X 1 1/2" HHMS ZINC
34108	10	2600APlus	9/16" OD. X .257 ID. WASHER ZINC
12147	11	2600APlus	SPACER (PIVOT LINK)
41256	12	2600APlus	CONTROL ROD
34100	13	2600APlus	#10 FLAT WASHER S.S.
32108	14	2600APlus	10-24 HEX NUT ZINC
25304	15	2600APlus	HANDLE SHAFT
25210L	16	2600APlus	LOWER HANDLE Assembly - Left
25210R	17	2600APlus	LOWER HANDLE Assembly - Right
37100	18	2600APlus	1/4-20 x 1" Carriage Bolt
31106	19	2600APlus	1/4-20 X 2 1/4" HHCS ZINC
25107	20	2600APlus	FRAME
31138	21	2600APlus	#8 X 3/8" PMT #8 HD COARSE (BLACK)
12317	22	2600APlus	SHUT OFF PLATE
31108	23	2600APlus	#10 X 1 1/4" TYPE A FHPS ZINC
12248	24	2600APlus	IMPELLER - DISHED
60451	25	2600APlus	GEAR BOX ASSEMBLY
12167	26	2600APlus	SPACER BEARING
12206	27	2600APlus	DUST COVER - ROUND
33107	28	2600APlus	1/8" X 1 3/4" COTTER PIN S.S.
70149	29	2600APlus	9" PNEUMATIC WHEEL
34103	30	2600APlus	1" OD. X 17/32" ID. X 1/32" WASHER ZINC
33106	31	2600APlus	1/8" X 3/4" COTTER PIN ZINC
23519	32	2600APlus	AXLE
60027	33	2600APlus	WING NUT ASSEMBLY (BLACK)