



## Spreader Settings

### LAWNSAND

Application

The fertiliser spreader should be calibrated prior to initial use and thereafter if the rate of application is changed.

Spreader Setting Guide

Spreader	Spread Width (m)	Cone Setting	Application Rate	Notes
			35g/m <sup>2</sup>	
Accupro 2000 / SR - 2000	1.2	8	J	Apply in 2 directions to apply 70g/m <sup>2</sup>
Ev-N-Spred Range	1.2		20	Apply in 2 directions to apply 70g/m <sup>2</sup>

The settings above are provided as a guide only and have been calibrated at a walking speed of 3.5mph. Regular calibration of the spreader should take place

### PRESTIGE FINE TURF - Settings are based on applying in 2 directions @ 1/2 rate

Application

The fertiliser spreader should be calibrated prior to initial use and thereafter if the rate of application is changed.

Spreader Setting Guide

Spreader	Spread Width (m)	Cone Setting	Application Rate
			17.5/m <sup>2</sup> = Half Rate
			Apply in 2 directions for 35g/m <sup>2</sup> = Full Rate
Accupro 2000 / SR - 2000	4.8	6	L
Ev-N-Spred Range	4.8		10

The settings above are provided as a guide only and have been calibrated at a walking speed of 3.5mph. Regular calibration of the spreader should take place

### PRESTIGE OUTFIELD - Settings are based on applying in 2 directions @ 1/2 rate

Application

The fertiliser spreader should be calibrated prior to initial use and thereafter if the rate of application is changed.

Spreader Setting Guide

Spreader	Spread Width (m)	Cone Setting	Application Rate
			17.5/m <sup>2</sup> = Half Rate
			Apply in 2 directions for 35g/m <sup>2</sup> = Full Rate
Accupro 2000 / SR - 2000	4.8	6	M
Ev-N-Spred Range	4.8		12

The settings above are provided as a guide only and have been calibrated at a walking speed of 3.5mph. Regular calibration of the spreader should take place

**The person applying the product is responsible for the application and the calibration of the spreader**

**This is for guide purposes only**